

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

BF

HA

EL

IDX

ALPHABETICAL INDEX

A

ABS (anti-lock brake system)	BR-22
ABS actuator	BR-26
ABS circuit diagram	BR-45
ABS component parts and connector locations	BR-42
ABS control unit	BR-26
ABS hydraulic circuit	BR-22
ABS self-diagnosis	BR-33, 37
ABS symptom chart	BR-35
ABS system components	BR-23
ABS trouble diagnoses	BR-32
ABS wheel sensors	BR-25
ABS wiring diagram	BR-27
A/C air flow	HA-11
A/C circuit diagram (manual A/C)	HA-39
A/C component layout	HA-10
A/C compressor clutch removal and installation	HA-70
A/C compressor description	HA-13
A/C compressor mounting	HA-68
A/C compressor precaution	HA-4
A/C compressor special service tool	HA-4
A/C control operation (manual A/C)	HA-12
A/C diagnostic work flow (manual A/C)	HA-19
A/C harness layout (manual A/C)	HA-37
A/C HFC134a (R134a) system precaution	HA-2
A/C HFC134a (R134a) system service procedure	HA-63
A/C HFC134a (R134a) system service tools	HA-5
A/C lubricant (R134a)	HA-65
A/C operational check	HA-20
A/C performance chart	HA-32
A/C performance test diagnoses	HA-30
A/C relay	HA-60
A/C service data specification	HA-73
A/C symptom chart (manual A/C)	HA-22
A/C trouble diagnoses (manual A/C)	HA-18
A/C wiring diagram (manual A/C)	HA-40
A/T control DTC:P0600	EC-192
A/T diagnosis communication line	EC-171
Accelerator control system	FE-2
Accelerator wire adjustment	FE-2
Activated carbon canister	EC-18
Activated carbon canister inspection	EC-18
Air bag	BF-80
Air bag precautions	GI-2
Air bag system trouble diagnoses	BF-93
Air bag-caution labels	BF-82
Air bag-disposal	BF-89
Air bag-removal and installation	BF-85
Air bleeding for brake system	BR-5
Air cleaner filter replacement	MA-12

Air conditioner cut control	EC-16
Air flow meter - See Mass air flow sensor	EC-92
Air mix door control linkage adjustment	HA-61
Air mix. door motor	HA-61
Alternator	EL-33
Angular tightening application	EM-2
Anti-freeze coolant	MA-8
ASCD (automatic speed control device)	EL-130
AT control unit	AT-95
AT fluid temperature sensor	AT-99
AT indicator lamp	EL-66
AT removal and installation	AT-124
AT self-diagnoses	AT-41
AT shift lock system	AT-110
AT trouble diagnoses	AT-11
Audio	EL-118
Automatic transmission fluid	MA-8
Automatic transmission fluid replacement	MA-16
Automatic transmission number	GI-34
Auxiliary air control (AAC)	EC-110
Axle housing (rear)	RA-7

B

Back-up lamp	EL-53
Back-up lamp switch (MT)	MT-5
Ball joint front axle	FA-14
Battery	EL-20
Baulk ring (MT)	MT-9
Belt inspection (drive belt)	MA-9
Bi-level door control linkage adjustment	HA-62
Blower motor	HA-59
Blower resistor	HA-59
Body alignment	BF-76
Boring/horning cylinder block	EM-38
Brake booster	BR-9
Brake control valve (Proportioning Valve)	BR-4
Brake fluid	MA-8
Brake fluid change	BR-5
Brake fluid level	MA-17
Brake fluid level and line check	BR-5
Brake hydraulic line	BR-3
Brake inspection	MA-17
Brake lines and cables inspection	MA-17
Brake master cylinder	BR-7
Brake pedal	BR-6
Bumper (front)	BF-7
Bumper (rear)	BF-9

ALPHABETICAL INDEX

C

Camshaft inspection	EM-24
Camshaft position sensor (CMPS)	EC-88
Camshaft position sensor inspection	EC-91
Canister control	EC-18
Canister control solenoid valve	EC-188
Center bearing assembly (propeller shaft)	PD-8
Center bearing disassembly (propeller shaft)	PD-8
Charging system	EL-31
Cigarette lighter	EL-109
Clearance lamp	EL-51
Clock	EL-109
Closed loop control	EC-139
Clutch cover	CL-10
Clutch disc	CL-10
Clutch fluid level	MA-15
Clutch master cylinder	CL-6
Clutch operating cylinder	CL-7
Clutch pedal	CL-4
Clutch pedal free play	CL-4
Clutch pedal height	CL-4
Clutch release bearing	CL-8
Clutch withdrawal lever	CL-8
Coil spring (front)	FA-12
Coil spring (rear)	RA-19
Combination lamp (rear) removal and installation	BF-59
Combination meter	EL-75
Combination switch	EL-35
Compression pressure	EM-9
Compressor clutch removal and installation	HA-70
Compressor description	HA-13
Compressor mounting	HA-68
Compressor precaution	HA-4
Compressor special service tool	HA-4
Connecting rod	EM-37
Connecting rod bearing clearance	EM-41
Connecting rod bushing clearance	EM-41
Consult for ABS	BR-36
Consult for ECCS	EC-39
Consult general information	GI-91
Control lever (MT)	MT-10
Control valve (AT)	AT-147
Converter housing installation	AT-126
Coolant replacement	MA-10
Cooling circuit (engine)	LC-6
Cooling fan	LC-9
Cooling fan control	EC-205
Cooling fan motor inspection	EC-212
Cooling fan relay inspection	EC-212
Counter gear (MT)	MT-9
Coupling sleeve (MT)	MT-9

Crank angle sensor built into distributor - See Camshaft position sensor	EC-88
Crankshaft assembly	EM-43
Crankshaft bearing clearance	EM-39
Crankshaft inspection	EM-39
Crankshaft position sensor (OBD)	EC-167
Crankshaft position sensor (OBD) inspection	EC-170
Cylinder block	EM-34
Cylinder block boring	EM-38
Cylinder head	EM-23
Cylinder head bolt tightening	EM-18

D

Detonation sensor - See Knock sensor	EC-130
Device (FICD) solenoid valve	EC-219
Diagnostic trouble code (DTC) for ECCS OBD system	EC-29
Differential carrier assembly	PD-26
Differential carrier disassembly	PD-14
Differential gear oil	MA-8
Differential gear oil replacement	MA-17
Distributor ignition (DI) system	EC-15
Door adjustment (front)	BF-11
Door mirror	BF-72
Drive pinion diff. inspection	PD-18
Drive plate runout	EM-42
Drive shaft (rear)	RA-11
Dropping resistor (AT)	AT-101

E

ECCS basic inspection	EC-68
ECCS component parts location	EC-9
ECCS on-board diagnostic system	EC-29
ECCS symptom matrix chart	EC-71
ECCS system diagram and chart	EC-8
ECCS trouble diagnoses	EC-53
ECM input/output signal inspection	EC-79
EGR canister control solenoid valve inspection	EC-191
EGR control (EGRC) - BPT valve	EC-137
EGR control (EGRC) - solenoid valve	EC-188
EGR temperature sensor	EC-133
EGR temperature sensor inspection	EC-136
EGR valve inspection	EC-124
EGRC - BPT valve inspection	EC-138
Electrical units location	EL-190
Engine control module (ECM)	EC-115
Engine coolant temperature sensor (ECTS)	EC-97
Engine coolant temperature sensor (ECTS) DTC13, P0115	EC-97

ALPHABETICAL INDEX

Engine coolant temperature sensor (ECTS) DTC13, P0115 inspection.....	EC-100
Engine coolant temperature sensor (ECTS) DTC98, P0125.....	EC-178, 182
Engine oil.....	MA-8
Engine oil filter replacement.....	MA-13
Engine oil replacement.....	MA-12
Engine outer component parts.....	EM-7
Engine removal.....	EM-32
Engine serial number.....	GI-34
Evaporative emission system.....	EC-18
Exhaust gas recirculation (EGR) system.....	EC-117
Exhaust gas recirculation (EGR) valve.....	EC-117
Exhaust system.....	FE-7
Exhaust system inspection.....	MA-15
Exterior.....	BF-55
Exterior lamp.....	EL-51

F

Fan switch.....	HA-59
Fifth position switch.....	EC-223
Final drive disassembly.....	PD-14
Final drive pre-inspection.....	PD-14
Fluid temperature sensor (AT).....	AT-99
Fluids.....	MA-8
Flywheel runout.....	EM-42
Fog lamp, front.....	EL-55
Fork rod (MT).....	MT-10
Forward clutch.....	AT-166
Freeze frame data.....	EC-30
Front axle.....	FA-8
Front bumper.....	BF-7
Front disc brake.....	BR-11
Front oxygen sensor.....	EC-125
Front oxygen sensor monitor.....	EC-31
Front suspension.....	FA-11
Fuel check valve inspection.....	EC-19
Fuel cut control (at no load & high engine speed).....	EC-17
Fuel filler lid.....	BF-9
Fuel filter replacement.....	MA-11
Fuel gauge.....	EL-76
Fuel injection system.....	EC-157
Fuel line inspection.....	MA-11
Fuel precautions.....	GI-5
Fuel pressure check.....	EC-21
Fuel pressure release.....	EC-21
Fuel pump.....	EC-200
Fuel pump control.....	EC-200
Fuel pump inspection.....	EC-204
Fuel pump relay inspection.....	EC-204
Fuel system.....	FE-3
Fuel tank vacuum relief valve inspection.....	EC-19

Fuse.....	EL-19
Fusible link.....	EL-19

G

Gears (MT).....	MT-9
Generator.....	EL-33
Generic scan tool (GST).....	EC-51

H

Harness connector.....	EL-4
Harness layout.....	EL-193
Hazard warning lamp.....	EL-58
Headlamp.....	EL-38
Heated oxgen sensor (H02S) heater (rear).....	EC-166
Heated oxgen sensor (rear).....	EC-162
Height (Dimensions).....	GI-35
HFC134a (R134a) system precaution.....	HA-2
HFC134a (R134a) system service procedure.....	HA-63
HFC134a (R134a) system service tools.....	HA-5
High clutch.....	AT-164
Hood adjustment.....	BF-7
Horn.....	EL-109
How to erase DTC for ECCS OBD system.....	EC-29
How to read wiring diagrams.....	GI-8, 28
How to use this manual.....	GI-6

I

IACV - air regulator inspection.....	EC-218
IACV - FICD solenoid valve inspection.....	EC-222
IACV-AAC valve inspection.....	EC-114
Identification plate.....	GI-34
Idle air control valve (IACV) - air regulator.....	EC-216
Idle air control valve (IACV).....	EC-110
Idle mixture ratio inspection.....	EC-23
Idle speed inspection.....	EC-23
Ignition coil inspection.....	EC-109
Ignition timing inspection.....	EC-23
Illumination.....	EL-66
Inhibitor switch.....	AT-100
Injector inspection.....	EC-197
Injector removal and installation.....	EC-22
Instrument panel.....	BF-47
Intake air temperature sensor.....	EC-140
Intake air temperature sensor inspection.....	EC-144

ALPHABETICAL INDEX

Intake door control linkage
 adjustment HA-62
 Interior BF-50
 Interior lamp EL-66

K

Knock sensor (KS) EC-130
 Knock sensor inspection EC-132
 Knuckle spindle FA-8

L

Length (Dimensions) GI-35
 Line pressure solenoid valve AT-99
 Line pressure test (AT) AT-105
 Liquid gasket application EM-2
 Low and reverse brake AT-170
 Lower ball joint (rear susp.) RA-20
 Lubricant (R134a) A/C HA-65
 Lubricants MA-8
 Lubrication circuit (engine) LC-3
 Lubrication-locks, hinges and hood
 latches MA-19

M

Magnet clutch HA-70
 Main drive gear (MT) MT-9
 Mainshaft (MT) MT-9
 Maintenance (engine) MA-9
 Maintenance MA-1
 Maintenance general MA-3
 Maintenance periodic MA-5
 Maintenance schedule (1) MA-6
 Maintenance schedule (2) MA-7
 Malfunction indicator lamp (MIL) EC-31
 Manual transmission number GI-34
 Manual transmission oil MA-8
 Manual transmission oil replacement MA-15
 Mass air flow sensor (MAFS) EC-92
 Mass air flow sensor inspection EC-96
 Master cylinder (brake) BR-7
 Master cylinder (clutch) CL-6
 Meter and gauges EL-74
 Misfire EC-150
 Mode door control linkage
 adjustment HA-61
 Model variation GI-32
 Molding BF-55
 MT overhaul MT-8
 MT removal and installation MT-6
 Multi link/lower ball joint (rear) RA-20
 Multi purpose grease MA-8

Multi-remote control system BF-33
 Multiport fuel injection (MFI) system EC-13
 Multiport fuel injection precautions GI-4

N

Neutral position switch (MT) MT-5

O

Oil pan (engine) EM-10
 Oil pressure (engine) LC-3
 Oil pressure relief valve (engine) LC-5
 Oil pump (AT) AT-143
 Oil pump (engine) LC-4
 Oil pump regulator valve (engine) LC-5
 Oil seal replacement (engine) EM-21
 Oil seal replacement (front of final
 drive) PD-9
 Oil seal replacement (side of final
 drive) PD-9
 Operating cylinder (clutch) CL-7
 Overdrive switch AT-100
 Overrun clutch AT-166
 Overrun clutch solenoid valve AT-99
 Oversize piston EM-38
 Oxygen sensor (Front) EC-125

P

Park/Neutral position switch EC-183
 Parking brake control BR-20
 PCV (positive crankcase ventilation)
 inspection EC-20
 Personal lamp EL-71
 Pilot bushing replacement EM-44
 Pinion bearing preload diff. PD-20
 Pinion gear height diff. PD-20
 Piston assembly EM-42
 Piston pin inspection EM-36
 Piston ring inspection EM-36
 Piston to bore clearance EM-37
 Power antenna EL-124
 Power door lock BF-27
 Power steering fluid MA-8
 Power steering fluid level MA-18, ST-6
 Power steering gear ST-13
 Power steering hydraulic pressure ST-8
 Power steering oil pressure switch EC-213
 Power steering oil pressure switch
 inspection EC-215
 Power steering oil pump ST-23
 Power steering system bleeding ST-7
 Power supply routing EL-8

ALPHABETICAL INDEX

Power transistor & ignition coil	EC-105
Power transistor inspection	EC-109
Power window	BF-15
Precautions (General)	GI-2
Pressure plate - See Clutch cover	CL-10
Pressure test (AT)	AT-105
Propeller shaft	PD-5
Propeller shaft on vehicle service	PD-6
Propeller shaft vibration	PD-6

R

Rack retainer adjustment	ST-6
Radiator	LC-9
Rear axle (disc brake type)	RA-7
Rear bumper	BF-9
Rear disc brake	BR-14
Rear heated oxygen sensor (H02S) heater	EC-166
Rear heated oxygen sensor	EC-162
Rear side window	BF-71
Rear suspension	RA-17
Rear window defogger	EL-110
Rear window signal	EC-225
Refrigerant connection precaution	HA-3
Refrigerant discharging evacuating charging	HA-63
Refrigerant general precaution	HA-2
Refrigerant lines	HA-67
Refrigeration cycle	HA-9
Release bearing (clutch)	CL-8
Resistor inspection	EC-109
Reverse clutch	AT-160
Reverse gear (MT)	MT-9
Reverse idler shaft (MT)	MT-9
Revolution sensor (AT)	AT-101
Ring gear diff. Inspection	PD-18
Road wheel size	GI-35
Room lamp	EL-71

S

SAE J1930 terminology list	GI-39
Seat (front)	BF-60
Seat (rear)	BF-62
Seat belt	BF-63
Seat belt inspection	MA-19
Self-diagnostic results	EC-31
Shift control (MT)	MT-10
Shift fork (MT)	MT-10
Shift lock system	AT-110
Shift schedule	AT-33
Shift solenoid valve (AT)	AT-99
Shock absorber (rear)	RA-19
Side bearing preload diff.	PD-19
SMJ (super multiple junction)	Foldout page

Spark plug replacement	MA-14
Speedometer	EL-76
Spoiler (Rear)	BF-75
Spot lamp	EL-71
Spring (Wheelarch) height	FA-5
Stabilizer bar (front)	FA-13
Stabilizer bar (rear)	RA-21
Stall test (AT)	AT-102
Standardized relay	EL-5
Starter	EL-29
Starting system	EL-24
Steering linkage	ST-13
Steering switch	EL-37
Steering wheel and column	ST-9
Steering wheel play	ST-5
Steering wheel turning force	ST-7
Stop lamp	EL-51
Striking rod (MT)	MT-10
Strut (front)	FA-12
Sun roof	BF-65
Supplemental restraint system	BF-80
Synchronizer (MT)	MT-9

T

Tachometer	EL-76
Tail lamp	EL-51
Tension rod (front)	FA-13
Theft warning system	EL-159
Thermo control amp	HA-59
Thermostat	LC-8
Three way catalyst	EC-154
Three way catalyst precautions	GI-5
Throttle position sensor (TPS)	EC-145
Throttle position sensor inspection ...	EC-68, 149
Throwout bearing - See Clutch release bearing	CL-8
Thrust washer selection diff.	PD-26
Tie-rod	ST-17
Tightening torque of standard bolts	GI-38
Timing chain	EM-12
Tire rotation	MA-17
Tire size	GI-35
Tooth contact diff.	PD-25
Torque converter clutch solenoid valve	AT-99
Torque converter installation	AT-126
Tow truck towing	GI-37
Towing points	GI-37
Transmission case (MT)	MT-8
Transverse link (front)	FA-14
Tread-FR0R (Dimensions)	GI-35
Trim - door	BF-52
Trim - roof	BF-53
Trim - side and floor	BF-50
Trim-trunk room	BF-54
Triple pressure switch	HA-9, 60

ALPHABETICAL INDEX

Trunk lid..... BF-9
 Trunk room lamp EL-71
 Turn signal lamp..... EL-58
 Two trip detection logic EC-29

V

Vacuum hose (brake system)..... BR-10
 Vacuum hose drawing (ECCS) EC-11
 Valve clearance EM-30
 Valve guide inspection..... EM-26
 Valve seat inspection EM-27
 Valve spring inspection..... EM-28
 Vapor lines inspection MA-14
 Vehicle identification number GI-33
 Vehicle speed sensor (VSS) EC-101
 Viscosity number (SAE) MA-8

W

Warning buzzer..... EL-86

Warning lamps EL-83
 Water cock control rod adjustment HA-61
 Water pump LC-7
 Water temperature gauge EL-76
 Wheel alignment (front) FA-6
 Wheel alignment (rear)..... RA-5
 Wheel balance MA-17
 Wheel bearing (front axle) FA-6
 Wheel bearing (rear) RA-5
 Wheel hub (front)..... FA-8
 Wheel hub (rear)..... RA-7
 Wheel hub and steering knuckle..... FA-8
 Wheel sensors (ABS)..... BR-25
 Wheelarch height FA-5
 Wheelbase (Dimensions) GI-35
 Wide open & closed throttle position
 (CTP) switch EC-145
 Width (Dimensions) GI-35
 Windshield and windows BF-70
 Wiper and washer..... EL-100
 Withdrawal lever (clutch) CL-8

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

BF

HA

EL

IDX